STONE+
natural stone veneer

INSTALLATION GUIDELINE

TRANSLUCENT

TRANSLUCENT INSTALLATION GUIDELINE



Step 1

ដំឡើង Stone Panel: បិទសន្លឹកថ្ម Stone Veneer ទៅនឹងបន្ទះ acrylic


Install Stone Panel: For stability and light diffusion, bond the stone veneer to a clear acrylic .



Step 2

ប្រើប្រភេទកាវថ្លា សម្រាប់បិទភ្ជាប់សន្លឹកថ្ម ទៅនឹងបន្ទះ acrylic

Apply Clear Adhesive. Press the stone veneer onto the backing panel (acrylic) .

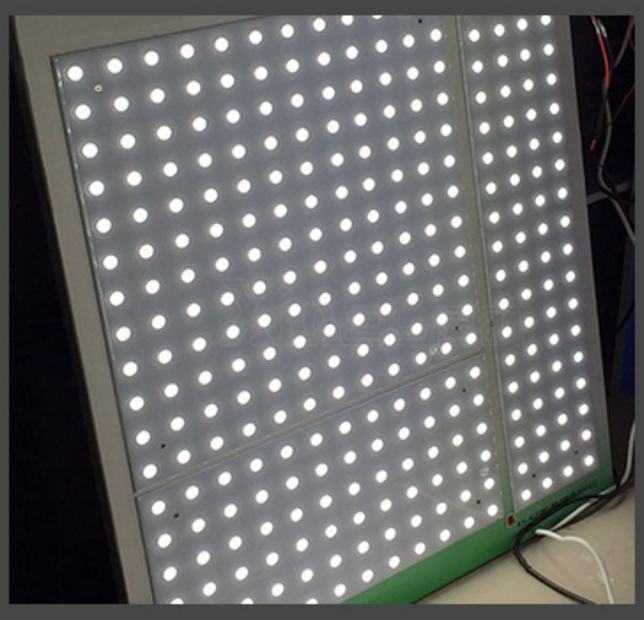

Step 3

ដំឡើងភ្លើង LED៖ ដំឡើង អំពូលភ្លើង LED នៅលើជញ្ជាំង ឬជាប្រអប់ភ្លើង (Light Box)។ ត្រូវ ត្រាកដថាចម្ងាយ ប្រហែល 5cm រវាងសន្លឹកថ្ម និងបន្ទះ Acrylic សម្រាប់ការសាយភាយពន្លឺបានល្អ។

Install Lighting: Set up your LED lighting system (panels or strips) on the wall or lightbox. Ensure a minimum distance (5–10cm) between the light source and the backing panel for even light diffusion.



Step 4

ដំឡើងបន្ទះថ្ម Stone Panel (Stone Veneer + Backing Panel) ទៅលើប្រអប់ភ្លើង LED ដែលបានរៀបចំ ត្រាកដថាវាត្រង់ស្មើល្អ

Mount the finished, rigid stone panel (Stone Veneer + Backing Panel) onto your prepared wall/lightbox structure, ensuring they are level



Step 5

Spray Stone Sealer សម្រាប់ការពារជម្រាបទឹក ក្នុងករណីប្រើនៅទីតាំងត្រូវសំណើម ឬទឹក។

Seal (Recommended): Apply a stone sealer to the face of the veneer, especially in wet areas, for protection.

STONE+

natural stone veneer



CONTACT US

St. 81BT, Sangkat Beong Tumpun, Khan Mean Chey, Phnom Penh

Tel: 070 288 711 (Telegram)

info@stoneplus.bz

www.stoneplus.bz